

# FLUID SYSTEMS<sup>®</sup> TFC<sup>®</sup> - HR 8" ELEMENTS

*High Rejection, Low Pressure RO Elements for Brackish Water*

## PRODUCT DESCRIPTION

Membrane Chemistry: Proprietary TFC<sup>®</sup> polyamide  
 Membrane Type: TFC<sup>®</sup>-HR membrane  
 Construction: Spiral wound with fiberglass outerwrap  
 Applications: High rejection for brackish water treatment  
 Options: Feed spacers: 28 mil (0.7 mm) or 31 mil (0.8 mm)

## SPECIFICATIONS

| Part Number | Model       | Permeate Flow |                     | Chloride Rejection percent | Active Membrane Area |                   | Feed Spacer mil (mm) |
|-------------|-------------|---------------|---------------------|----------------------------|----------------------|-------------------|----------------------|
|             |             | gpd           | (m <sup>3</sup> /d) |                            | ft <sup>2</sup>      | (m <sup>2</sup> ) |                      |
| 8882234     | 8040-HR-375 | 10,200        | (38.6)              | 99.55                      | 375                  | (34.8)            | 31 (0.8)             |
| 8882233     | 8040-HR-400 | 11,000        | (41.6)              | 99.55                      | 400                  | (37.2)            | 28 (0.7)             |


Test Conditions: 2,000 mg/l NaCl solution at 225 psi (1,550 kPa) applied pressure, 15% recovery, 77°F (25°C) and pH 7.5

## OPERATING AND DESIGN INFORMATION\*

Typical Operating Pressure: 150 - 250 psi (1,035 - 1,725 kPa)  
 Maximum Operating Pressure: 600 psi (4,140 kPa)  
 Maximum Operating Temperature: 113°F (45°C)  
 Maximum Cleaning Temperature: 113°F (45°C)  
 Maximum Continuous Free Chlorine: <0.1 mg/l  
 Allowable pH – Continuous Operation: 4 - 11  
 Allowable pH – Short Term Cleaning: 2.5 - 11  
 Maximum Differential Pressure per 40" Long Element: 10 psi (69 kPa)  
 Maximum Differential Pressure Per Vessel: 60 psi (414 kPa)  
 Maximum Feed Turbidity: 1 NTU  
 Maximum Feed SDI (15 minute test): 5

\* Consult Process Technology Group for specific information

## NOMINAL DIMENSIONS AND WEIGHT\*

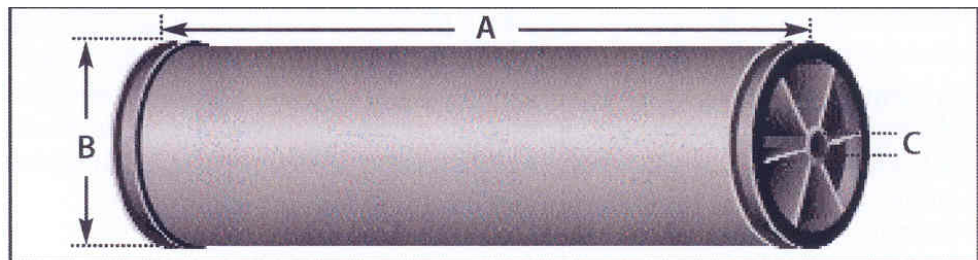

| Model       | A           |             | B           |             | C              |         | Weight lbs (kg) | Part Numbers |  |  |
|-------------|-------------|-------------|-------------|-------------|----------------|---------|-----------------|--------------|--|--|
|             | inches (mm) | inches (mm) | inches (mm) | inches (mm) | Interconnector | O-ring  |                 | Brine Seal   |  |  |
| 8040-HR-375 | 40 (1,016)  | 8 (203)     | 1.125 (29)  | 1.125 (29)  | 44 (20)        | 0035260 | 0035464         | 0030584      |  |  |
| 8040-HR-400 | 40 (1,016)  | 8 (203)     | 1.125 (29)  | 1.125 (29)  | 44 (20)        | 0035260 | 0035464         | 0030584      |  |  |

\* Dimensions are provided for reference only and should not be interpreted as accurate specifications.

### Performance:

Performance specifications shown on the front side of this document are nominal values. Individual element permeate flows may vary  $\pm 15\%$  from the values shown. Minimum chloride ion rejection is 99.2% at the conditions shown.

System performance should be predicted using KMS ROPRO® software. Element performance is based on the nominal values shown.

System operating data should be normalized and key performance parameters tracked using KMS NORMPRO® software.

### Operating Limits:

- **Operating Pressure:** Maximum operating pressure is 600 psi (4,140 kPa). Typical operating pressure for TFC®-HR systems is in the range of 150 psi (1,035 kPa) to 250 psi (1,725 kPa). Actual operating pressure is dependent upon system flux rate (appropriate for feed source) as well as feed salinity, recovery and temperature conditions.
- **Permeate Pressure:** Permeate pressure should not exceed feed-concentrate pressure by more than 5 psi (34 kPa) at any time (on-line, off-line and during transition).
- **Differential Pressure:** Maximum differential pressure limits are 10 psi (69 kPa) for a 40" (1,016 mm) long element. Maximum differential pressure for pressure vessel is 60 psi (414 kPa).
- **Temperature:** Maximum operating temperature is 113°F (45°C). Maximum cleaning temperature is 113°F (45°C).
- **pH:** Allowable range for continuous operation is pH 4-11. Allowable range for short term cleaning is pH 2.5-11. It is recommended to limit the exposure of the TFC-HR membrane to the extended pH range to 4 hours, once per month.
- **Turbidity and SDI:** Maximum feed turbidity is 1 NTU. Maximum feed Silt Density Index (SDI) is 5.0 (15 minute test). Experience has shown that feedwater with turbidity greater than 0.2 NTU generally results in frequent cleanings.

- **Recovery:** Maximum recovery is site and application specific. In general, single element recovery is approximately 15%. Recovery limits should be determined using KMS ROPRO program.

### Chemical Tolerance:

- **Chlorine:** Exposure of TFC-HR membrane to free chlorine or other oxidizing agents such as permanganate, ozone, bromine and iodine is not recommended. TFC-HR membrane has a free chlorine tolerance of approximately 1,000 ppm-hours based on testing at 77°F (25°C), pH 8. This tolerance may be significantly reduced if catalyzing metals such as iron are present or if the pH and/or temperature are different. Sodium metabisulfite (without catalysts such as cobalt) is the preferred reducing agent. TFC-HR membrane has a chloramine tolerance of approximately 60,000 ppm-hours in the absence of free chlorine based on testing at 77°F (25°C), pH 8.
- **Cationic (Positively Charged) Polymers and Surfactants:** TFC-HR membrane may be irreversibly fouled if exposed to cationic (positively charged) polymers or surfactants. Exposure to these chemicals during operation or cleaning is not recommended.

### Lubricants:

For element loading, use only the recommended silicone lubricant (or approved equivalent), water or glycerin to lubricate O-rings and brine seals. The use of petroleum based lubricants or vegetable based oils may damage the element and void the warranty.

### Service and Ongoing Technical Support:

KMS has an experienced staff of professionals available to assist end users and OEM's for optimization of existing systems and support with the development of new applications. Along with the availability of supplemental technical bulletins, KMS also offers a complete line of KOCHTREAT® and KOCHKLEEN® RO pretreatment and maintenance chemicals.

*The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information.*

---

Koch Membrane Systems, Inc., [www.kochmembrane.com](http://www.kochmembrane.com)

Corporate Headquarters: 850 Main Street, Wilmington, Massachusetts 01887-3388, US, Tel. Toll Free: 1-888-677-5624, Telephone: 1-978-694-7000, Fax: 1-978-657-5208

European Headquarters: Koch Chemical Technology Group Ltd., Units 3-6, Frank Foley Way, Stafford ST16 2ST, GB, Telephone: +44-178-527-2500, Fax: +44-178-522-3149

• San Diego US • Aachen DE • Lyon FR • Madrid ES • Milan IT • Wijnegem BE • Beijing & Shanghai CN • Mumbai & Chennai IN • Melbourne & Sydney AU • Singapore • Sao Paulo BR • Manama BH •

The FLOW LINES DESIGN, FLUID SYSTEMS, TFC, ROPRO, NORMPRO, KOCHKLEEN and KOCHTREAT are registered trademarks of Koch Membrane Systems, Inc. in the US and other countries.

The STYLIZED K is a registered trademark of Koch Industries, Inc. in the US and other countries.

Koch Membrane Systems, Inc. is a Koch Chemical Technology Group, LLC company.

© 2011 Koch Membrane Systems, Inc. All rights reserved worldwide.

05/11 Rev. 11-1